


XBA-EUR4 Option Switch Settings

Supported bill € 5, 10, 20, 50 4bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject € 5	ON							
★ Accept € 5	OFF							
★ Reject € 10		ON						
★ Accept € 10		OFF						
★ Reject € 20			ON					
★ Accept € 20			OFF					
★ Reject € 50				ON				
★ Accept € 50				OFF				
Reserved					ON			
Reserved					OFF			
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
★ Stack Banknote when Power-up							ON	
★ Reject Banknote when Power-up							OFF	
★ ENABLE IrDA Download								ON
★ Reserved								OFF


This dip switch is located at the side of XBA.

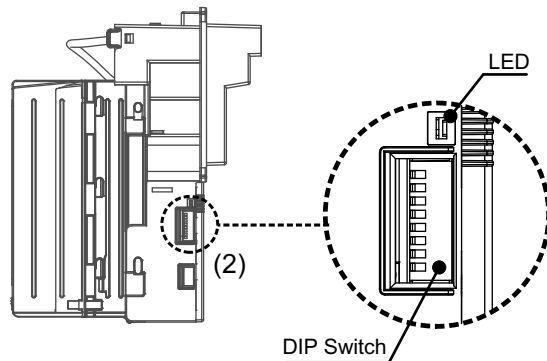

XBA-EUR4 (Pulse/MDB/ICT)

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	
Inhibit Active HIGH	ON								
★ Inhibit Active LOW	OFF								
★ ENABLE INHIBIT-Sleep only		ON							
★ 5 second Timeout only		OFF							
★ Normal (Note.2)			OFF	OFF					
★ Mode 1 (Note.3)			OFF	ON					
★ Mode 2 (Note.4)			ON	OFF					
★ Mode 1 + 2 (Note.5)			ON	ON					
★ Credit-Pulse Normal HIGH					ON				
★ Credit-Pulse Normal LOW					OFF				
★ Pulse Mode						ON			
★ Other Mode						OFF			
Pulse Mode									
★ 1 pulse / € 5						MDB Mode		OFF	OFF
★ 5 pulse / € 5						ICT002U Mode		OFF	ON
★ 10 pulse / € 5						ICT104U Mode		ON	OFF
★ 25 pulse / € 5						ICT104V Mode		ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

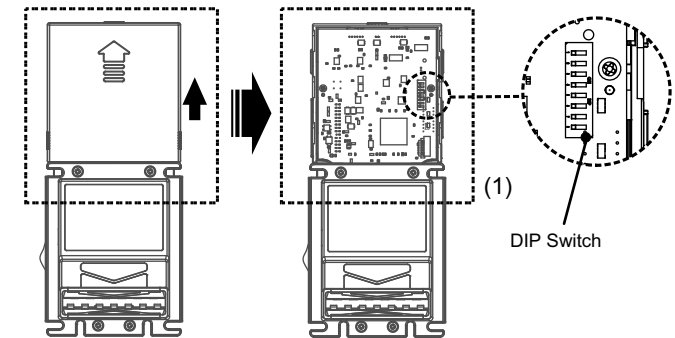

★ Manufacture setting

- Note :
1. After setting dip switch of the credit pulses, you should reset the bill acceptor again.
 2. Normal : No sleep function.
 3. Mode 1 : Bill-acceptor wakes up VMC with banknote only (special cable required).
 4. Mode 2 : VMC wakes up bill-acceptor.
 5. Mode 1+2 : Bill-acceptor wakes up with banknote or by VMC.
 6. BV1=€ 5, BV2=€ 10, BV3=€ 20, BV4=€ 50.